



1999 Ford Contour Sun Visor Replacement

This guide will teach you how to replace a broken sun visor in a 1999 Ford Contour.

Written By: Danielle Bailey



INTRODUCTION

A broken sun visor is a danger to yourself and other motorists. It could become dislodged while your driving, increasing your risk for becoming involved in a traffic accident. Luckily, sun visors are easy to remove and replace, which is what this guide will aim to teach you how to do.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Sun Visor




- Unscrew the visor from its housing.
 - ⓘ *The screws used are 1 inch sheet metal screws with a Phillips head.*

Step 2



- Disconnect any wires attached to the visor by squeezing the tab located on the power cable connector.
 - ★ *Reconnect the wiring before proceeding to the final step.*

Step 3

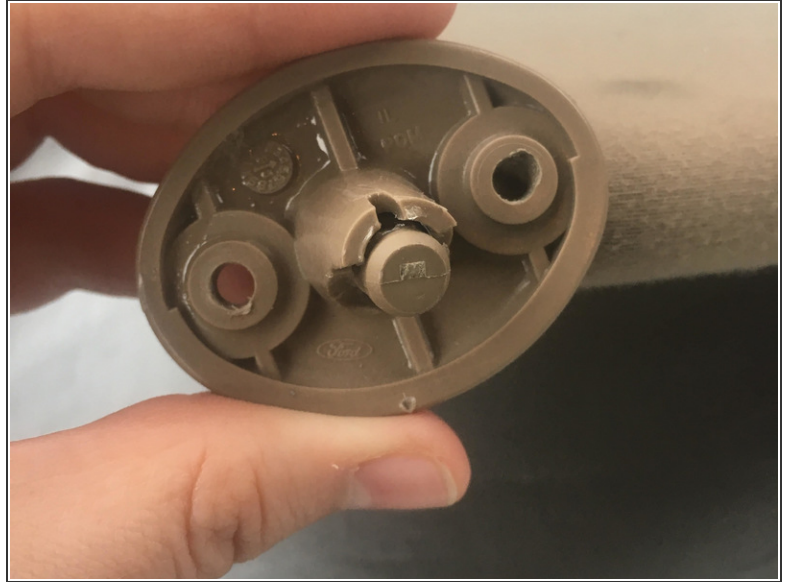

- Completely remove the visor and replace with a new one.

Once all steps are completed, the sun visor will work as before.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 02:28:16 AM.